


# CLIP TYPE CLOSED SHELVING

## ASSEMBLY INSTRUCTIONS


15800 NW 15th Avenue  
North Miami Beach, FL 33169  
www.quantumstorage.com  
1-800-685-4665

### 6. INSTALL FRONT OFFSET POST.

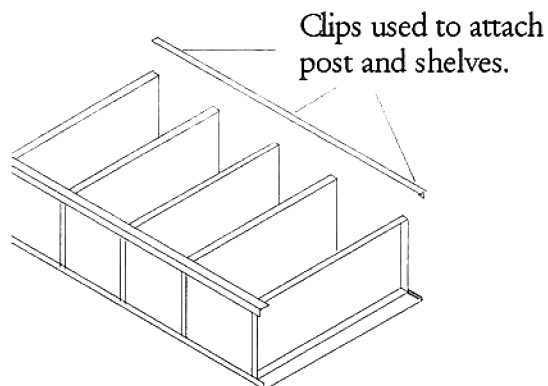


### 7. INSTALL SIDES

Attach side panel to posts using inner most hole pattern (hole pattern not being used by shelves). The top half of the side will overlap the bottom half of the side 3 inches.

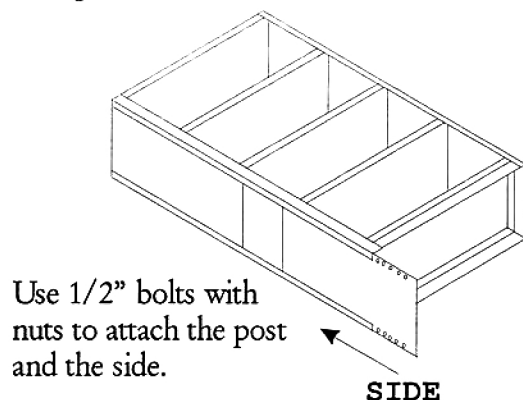

### 8. JOIN MULTIPLE UNITS BACK TO BACK

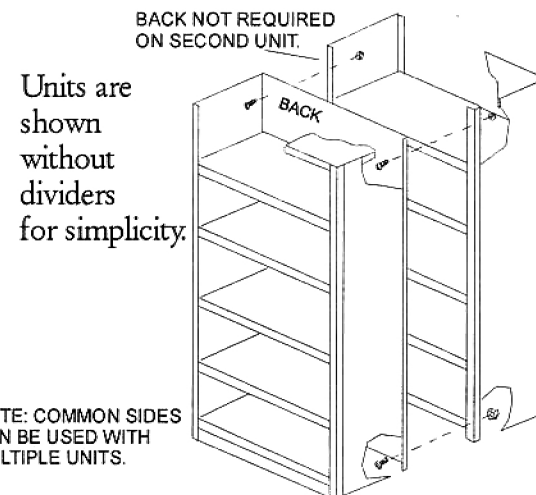


### 9. JOIN MULTIPLE UNITS SIDE TO SIDE.

Tie in top and bottom of all post with 1" bolts with nuts.

On units above 87" high, tie in the top, bottom and middle in the same way.


NOTE: COMMON SIDES CAN BE USED WITH MULTIPLE UNITS.

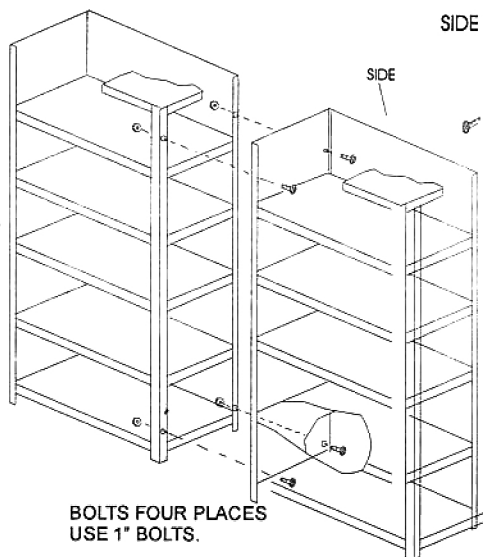


SIDE INSTALLATION

### 10. ACCESSORIES

#### POST COVERS

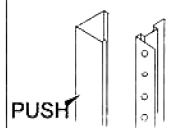


#### CORNER TYPE

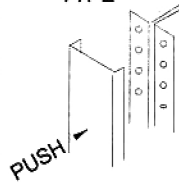


#### INTERMEDIATE TYPE

#### POST COVER


HALF DIVIDER  
FULL DIVIDER  
BOX GUIDE  
BIN FRONT  
SLIDING DIVIDER  
SANITARY BASE

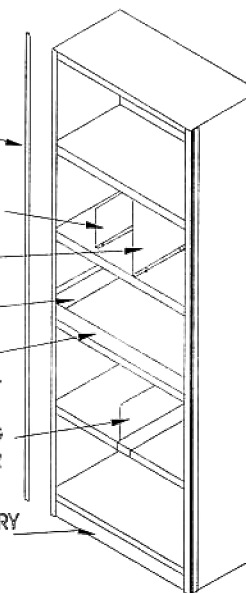


#### BOX GUIDES

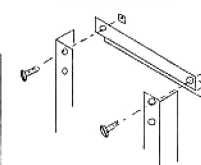

#### SIDES

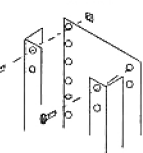

#### REINFORCING BAR



#### 5/8" BOLT

#### SANITARY BASE

