




CLIP TYPE OPEN SHELVING


ASSEMBLY INSTRUCTIONS

15800 NW 15th Avenue
North Miami Beach, FL 33169
www.quantumstorage.com
1-800-685-4665

1. PARTS

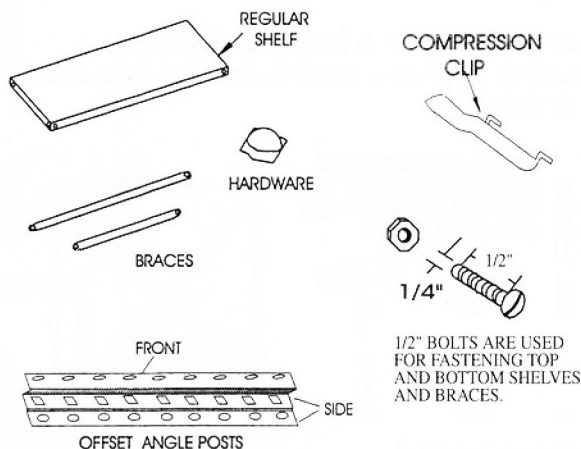

2. INSTALL SIDE BRACES

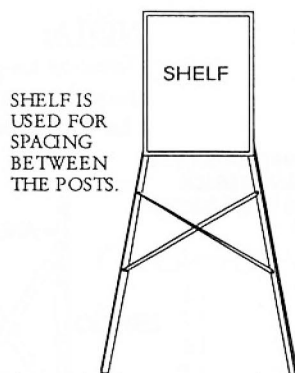


Place the braces on the inside of the post. Insert $\frac{1}{4} \times \frac{1}{2}$ long bolts from the outside of the posts. Attach nuts and tighten.

NOTE:

Layout posts with angles facing each other. Use a shelf for spacing posts and install braces according to the dimension below.


SIDE BRACES HOLE SPACING TOP TO BOTTOM.

WIDTH	SPACE
12"	13"
15"	13"
18"	13"
24"	14"
30"	17"
36"	20"

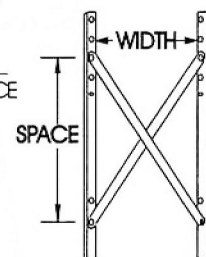

BACK BRACE HOLE SPACING TOP TO BOTTOM

WIDTH	SPACE
24"	12"
30"	14"
36"	17"
42"	17"
48"	17"

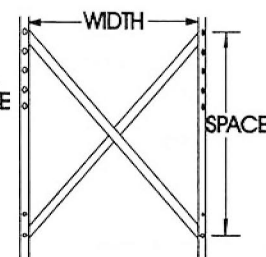


Braces attach to the inside of the unit.


NOTE: It may be necessary to install braces a hole or two higher if shelf in the way of the brace.

3. INSTALL TOP & BOTTOM

FOUR 1/2" NUTS AND BOLTS TO BE USED ON TOP AND BOTTOM SHELF

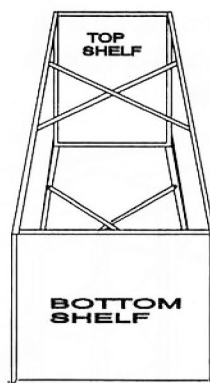


4. INSTALL BACK BRACE

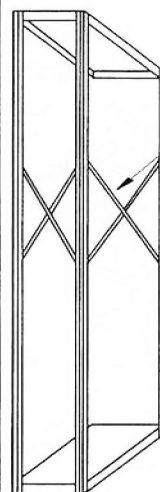

STAND THE UNIT UPRIGHT

Install back braces at the desired height. All bolts and nuts must be tight at this.

Use large handle to tighten all screws for maximum tightness and least wrist fatigue.



5. INSTALL SHELVES

