


ASSEMBLY INSTRUCTIONS END FRAME

End Frame

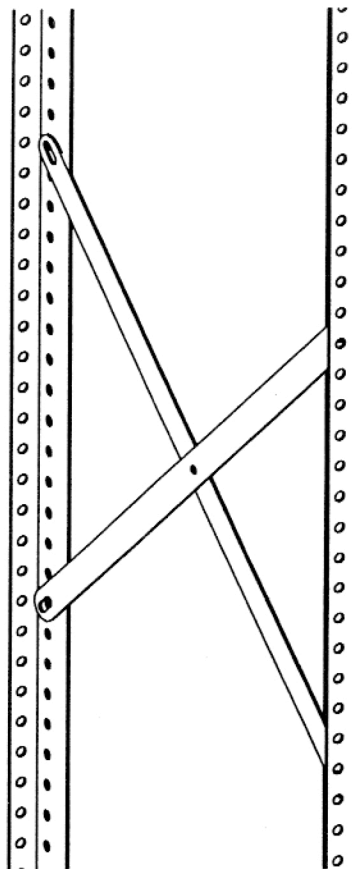

(Unit Assembly on Other Side)

How to Assemble End Frame

Read all instructions prior to assembly.

1. Place two gov't posts on table or horses. Position posts parallel to each other and spaced apart to match depth of shelf.
2. If sway braces have holes punched in center, bolt a pair of side braces together at the center to form an "X".
3. Attach the side sway brace to the inside of the posts. Sway braces should be positioned near midpoint of height of unit.

Note: Heads of bolts should be on outside of frame.

Short side of post should be to front and rear of unit.